



Automatikwerk

Self-winding movement

J800.2

J800.3

JUNGHANS - DIE DEUTSCHE UHR

JUNGHANS – THE GERMAN WATCH

Many congratulations on your purchase of a timepiece from Junghans.

What began in 1861 with the founding of the firm in Schramberg quickly developed into one of the most fascinating success stories of the German watchmaking industry. While since that time the demands made of watches may have changed, the Junghans philosophy has always remained the same. Innovative flair and the constant pursuit of precision right down to the smallest detail define how the company works and thinks. You can see and sense this in every watch that carries the Junghans name. For as diverse as the Junghans range may be, it pursues one single goal: to combine traditional craftsmanship with cutting-edge watch technology and exciting design. That makes every watch with the Junghans star unique.

We hope you will enjoy this very special time-keeping instrument.

Yours,
Uhrenfabrik Junghans GmbH & Co. KG

Inhalt

Instructions for use	17
Technical Information	20
General Information	21
Impermeability	22


Seite

Instructions for use

Winding up the watch

With the winder in position A, you can wind up the automatic movement manually. At least 2 to 3 rotations of the winder are needed to start the movement. It is better to wind it up completely. It is fully wound up after approx. 30 rotations of the winder, as then the maximum accuracy and its power reserve (even after the watch is put down) will last for the maximum period. If your model has a screw-locked winder, this must be unscrewed by turning it to the left to start your watch going. After you have set your watch, you should wear it, so that the automatic winding system (via rotor movement) keeps it constantly operational.

Features and functions Calibre J800.2 / J800.3

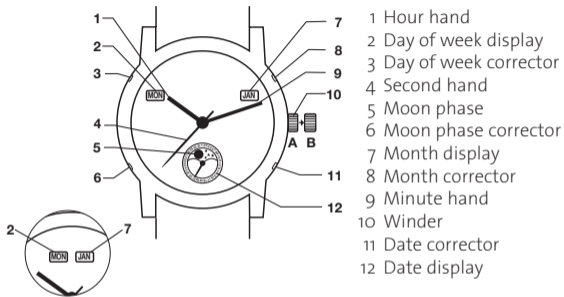

Setting the time

Pull the winder into position B. That stops the watch movement. To set your watch accurately to the second, it is best to stop the movement as the second hand is passing the figure 60. You can now position the minute hand precisely in line with the relevant minute marker and set the desired time. Press the winder back into position A to start the second hand.

Setting the date

To set this, press the date corrector (11) with a pointed object until the date you want is displayed.

Setting the day of the week

To set this, press the day of week corrector (3) with a pointed object until the day of the week you want is displayed.

Setting the month

To set this, press the month corrector (8) with a pointed object until the month you want is displayed.

Setting the moon phase

To set this, press the moon phase corrector (6) with a pointed object until the moon phase you want is displayed. To set the moon phase accurately we recommend that you make this setting when there is a full moon.

No corrections to date, moon phase, day or month may be made during the changeover period from 3pm to 1am.

Technical information

Mechanical 3-hand movement with date, day of week, month and moon phase display

Calibre J800.2 / J800.3

Automatic winding mechanism with ball-bearing

25 jewels

28,800 semi-vibrations per hour

Approx. 36 hour power reserve

Anti-magnetic to DIN 8309

Shockproof: Incabloc

Spring: Nivarox II

Balance: Gold-plated nickel

General information

External influences can affect the watch's waterproof qualities, which may let in moisture. We therefore recommend that you have your watch regularly inspected by your Junghans specialist. Other servicing tasks or wrist strap repairs should also be done by your Junghans specialist. Your watch is fitted with a quality wrist strap that has undergone multiple inspections in our factory. If, however, you decide to change the strap, please fit a new one of the same quality, preferably an original Junghans wrist strap. Watch and wrist strap can be cleaned with a dry or slightly moistened cloth.

NB: Do not use chemical cleaners (e.g. benzine or paint thinners). These may harm the surface.

Impermeability

Marking	Instructions for use				
	 Washing, rain, splashes	 Shower	 Bath	 Swimming	 Diving without equipment
No mark	No	No	No	No	No
3 ATM	Yes	No	No	No	No
5 ATM	Yes	No	Yes	No	No
10 ATM	Yes	Yes	Yes	Yes	No

The designation "3–10 ATM" only applies to brand new watches. External influences can affect water resistance. Please have your watch checked regularly.